



Tabela de Cargas

LEITOS ABA

100x19

Leitos 100x19

Leito#14/16aba 100x19mm

Distância entre suportes

Largura	1500	2000
100	599	509
200	593	504
300	581	493
400	544	462
500	473	402
600	366	311
700	302	282
800	319	271
900	281	239
1000	255	217

Leito #12/14 aba 100x19mm

Distância entre suportes

Largura	1500	2000
100	761	647
200	753	640
300	737	627
400	691	587
500	401	511
600	465	396
700	422	358
800	405	344
900	357	304
1000	324	276

Leito #16/18 aba 100x19mm


Distância entre suportes

Largura	1500	2000
100	540	405
200	534	400
300	523	392
400	490	367
500	426	320
600	330	251
700	299	224
800	287	215
900	253	189
1000	230	172

Leito #18/18 aba 100x19mm

Distância entre suportes

Largura	1500	2000
100	368	312
200	363	309
300	356	302
400	333	283
500	290	246
600	224	191
700	203	173
800	195	166
900	172	146
1000	156	133

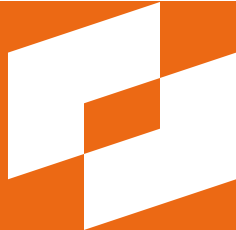



www.inecel.com.br

(47) 3160.0100

Rod. BR 280, Km 53, 222 - Bairro Avai
89270-000 - Guaramirim - SC