



Tabela de Cargas

LEITOS ABA

100x45

Leitos 100x45

Leito#14/16aba 100x45mm

Distância entre suportes

Largura	1500	2000
100	617	527
200	611	522
300	598	510
400	560	478
500	487	416
600	377	322
700	342	292
800	329	281
900	289	247
1000	263	225

Leito#12/14 aba 100x45mm

Distância entre suportes

Largura	1500	2000
100	784	670
200	776	663
300	759	649
400	712	608
500	619	529
600	479	410
700	435	371
800	417	356
900	368	315
1000	334	286

Leito #16/18 aba 100x45mm


Distância entre suportes

Largura	1500	2000
100	556	421
200	550	416
300	539	408
400	505	382
500	439	333
600	340	261
700	308	233
800	296	224
900	261	197
1000	237	179

Leito #18/18 aba 100x45mm

Distância entre suportes

Largura	1500	2000
100	379	323
200	374	320
300	367	313
400	343	293
500	299	255
600	231	198
700	209	179
800	201	172
900	177	151
1000	161	138

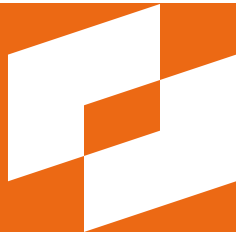



www.inecel.com.br

(47) 3160.0100

Rod. BR 280, Km 53, 222 - Bairro Avai
89270-000 - Guaramirim - SC